



- To Remove Cap, Insert Flat Head of Screwdriver into Slot and Pry Upward
- Cap can be re-inserted to seal a partially used cartridge. To avoid cross contamination, match up the circles and squares on the cap and top of cartridge body
- **For 50mL Cartridges, the cap can be easily snapped off with your thumb and forefinger in the same upward motion.**