

# Resinlab®

**AN ELLSWORTH ADHESIVES COMPANY**

W186 N11687 MORSE DRIVE GERMANTOWN, WI 53022 262-502-6610 FAX 262-502-4743

## Epoxy Resin Crystallization

### Introduction

Liquid DGEBA (Diglycidylether of Bis-phenol-A) epoxy resins and the liquid DGEBA (Diglycidylether of Bis-phenol-F) epoxy resins are supercooled liquids at room temperature. That is, they are solids at room temperatures but normally remain liquid below their solidification temperature. Technically the solidification / melting point of DGEBA is 45-50°C and DGEBA is 80-85°C. They supercool because the crystallization process is slow at ordinary temperatures and they do not readily form the seed crystals that are required for solidification to occur. As one increases the average molecular weight, higher molecular weight species and isomers increase. These isomers and higher molecular weight species reduce the tendency for crystal formation and growth.

Crystallization shows up as cloudiness, free floating crystals, crystal masses, or as a completely solidified mass. It is the same process that causes honey to crystallize at home. The crystallization phenomenon is possible in all epoxy resin and hardeners. It is the phase change of a material from a liquid to a solid crystalline state. The main ingredient of most epoxy resins is a solid material at room temperature. Exposure to extreme cold, temperature cycles and other factors may induce crystal growth and revert the materials back to their natural solid state. Crystallization is difficult to predict or eliminate entirely. It happens without warning and may only affect part of a given lot of material. While it may be only an inconvenience with two components systems, it can cause major problems with one components. Understanding the factors believed to influence crystallization and the methods of dealing with it can turn this problem into merely an annoyance.

### Causes


Epoxy crystallization occurs similarly to other crystal growth. High purity, low viscosity, impurities, extreme cold, and temperature cycles all increase the probability of occurrence. Usually the presence of a "seed" initiates the crystallization process. Here are some of the factors that contribute to the crystallization process in epoxy resins:

### High Purity

A high purity resin has been stripped of all chemical byproducts and contaminants and falls within a given range of molecular weights. The presence of by-products and a wide range of molecular weights serves to broaden the temperature transition range between liquid and solid. High purity resins have a narrow temperature range during which they transform from liquid to solid. An analogy is pure water which transforms from liquid to crystalline solid (freezes) at 0°C. Yet with the addition of another chemical "table salt", the water freezes at much lower temperatures. The closer a high purity resin gets to the point where it changes from a liquid to a glassy crystalline solid state the greater the chance minute crystals will start to form. These crystals act as seeds and in combination with other factors can rapidly change the liquid to a solid.

### Low Viscosity

Low viscosity resins are very low in molecular weight and short chained. The lower the viscosity the easier the liquid epoxy can move and orient itself around seed crystals. High molecular weight, high

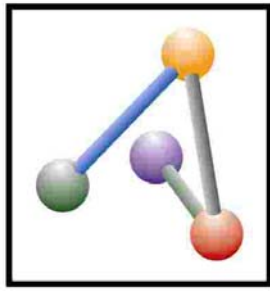

# ResinLab®

**AN ELLSWORTH ADHESIVES COMPANY** 

viscosity materials are longer chained and less prone to crystallize. Storing a "seed" free liquid at low (0°C) temperatures will slow molecular motion and impede crystal formation and growth. Diluents and modifiers generally increase the rate of crystal formation and growth, however there are significant differences on the tendency to crystallize between diluents. Other additives, such as pigments, fillers and wetting agents, can also affect the rate of crystal formation and growth. Generally, if one prevents the introduction of seed crystals into a resin handling system, crystallization will be a rare event unless one is handling high purity resins.

## **Impurities**

Impurities, usually minute particulate matter, can often act as "seeds" in unfilled systems, initiating the formation of resin crystals which then continue to propagate. Fillers rarely initiate crystallization due to their large size and high content, actually they often act to inhibit crystallization.

## **Extreme Cold**

While cold does impede growth by slowing movement, extreme cold (-40°C) accelerates crystal formation once seed crystals have formed and if low enough can cause complete crystallization by itself.

## **Temperature Cycles**

Temperature cycles as little as 20-30°C can create a vicious circle that is the most common cause of crystallization. Once the material is warmed molecular motion is enhanced allowing liquid epoxy to orient itself around "seed" crystals. Subsequent exposure of an "oriented" material to cold temperature will then accelerate crystal growth. Once started the crystallization typically goes to completion resulting in a solid mass. The temperature fluctuations that occur between daytime and nighttime temperatures can initiate and/or accelerate the crystal growth process. These can occur during transit, while sitting on a loading dock or production floor.

## **Solutions**

Crystallization in base resins and two component formulations is a major inconvenience but not an insurmountable problem. Heating these materials several hours at 50-60°C easily reverses the phenomenon. All the crystals must be completely melted as any microscopic unmelted crystals will act as "seeds" and cause the crystallization to return in days. Along with the gentle heating the material should also be stirred and the container sides and bottom scrapped to assure all crystals have been melted and the heat is being evenly distributed. If crystals reappear, merely apply heat and remelt. One component systems should not be heated as product damage or curing may occur. Controlling and monitoring shipping and storage conditions is critical for minimizing temperature fluctuations. Good housekeeping is another factor as container spouts, spigots and closures must be kept free of resin buildup to prevent crystal formation here as well. While epoxy compounders and end users have heightened their awareness to crystallization it still remains very difficult to accurately predict or eliminate. If crystallization remains a recurrent problem, products less prone to crystallize may have to be evaluated as alternatives.